


Nook Simple Touch User Guide


DO NOT PUT THE NOOK IN YOUR BACKPACK OR LEAVE IT IN A CAR! Always keep it in the cover, and carry it in the bag provided by the library.

Power Button

Press and hold the power button on the back of your NOOK for about 2 seconds to turn your NOOK on or off.

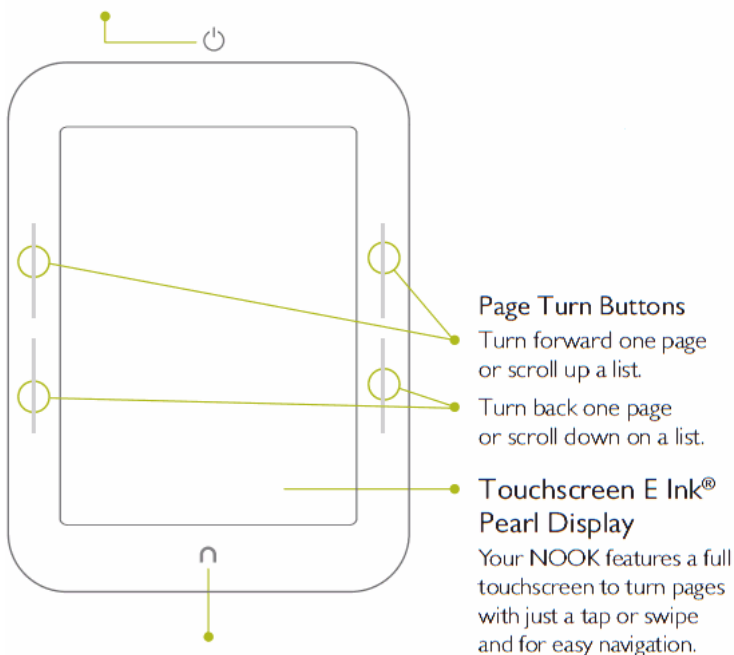

Quick Nav Button

This  NOOK™ symbol on the bottom face of the device is a button. Press it to wake up your device from sleep mode (turn the display on). When the device is on, press the Quick Nav Button to view the Quick Nav Bar.

Troubleshooting

The screen won't let me tap...

If the Nook is “asleep” and you see pictures of nature, press the Quick Nav button and then slide your finger left-to-right across the bottom of the screen to unlock the Nook's touchscreen.

That didn't work...

If the Nook's screen “freezes,” press and hold the power button in the back for 20 seconds. Count to 10, then press the power button for 2 seconds to turn it back on.

The screen has fingerprints all over it...

Please do not clean the Nook's touchscreen yourself! Bring it to the library so that we can clean it with a special micro-fiber cloth.

Low battery warning...

If you see a “low battery” screen, try to keep the Nook turned off when you aren't using it. If the battery dies, bring it to the library the next day to charge, and we will return it to you before you go home.

